Quick start guide

for models 6032/6042/6043/6052/6053

STEP 1 Install the telephone base and chargers

- Plug the connector into the power jack at the bottom of the telephone base and chargers, then plug the power adapter into an electrical outlet not controlled by a wall switch.
- Plug one end of the telephone line cord into the telephone line jack at the bottom of the telephone base. Then plug the other end of the cord into the modular wall telephone outlet.

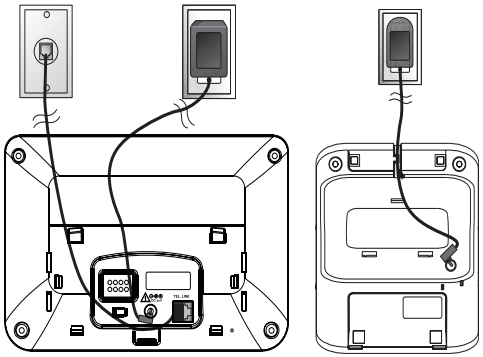

NOTE: Use only the power adapters (or equivalent) supplied with your VTech telephone.

STEP 2 Install and charge the battery

- Remove battery compartment cover by pressing on the indentation and sliding downwards (only for 6043 and 6053).
- Align the two holes in the plug with the socket pins according to the color-coded label in the battery compartment, then snap the plug into place.
- Place the battery into the compartment.
- Position the battery compartment cover and slide it upwards until it clicks into place.
- Put the handset in the telephone base or the charger to charge the new battery for at least 16 hours. The battery may have enough charge for short calls. For best performance, charge it for at least 16 hours.
- The **CHARGE** light on the telephone base or charger will be on when the handset is properly positioned. Refer to the **Troubleshooting** section in the user's manual if the **CHARGE** light is not on.

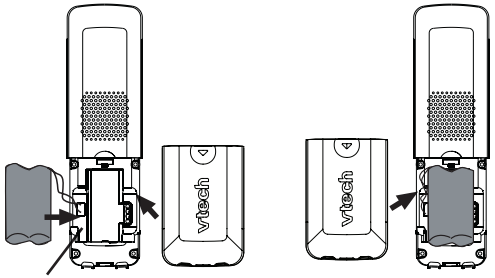

color-coded label

STEP 3 Make, receive and end calls

Make a call

- Press **TALK/FLASH** or to ensure there is a dial tone, then dial the telephone number.

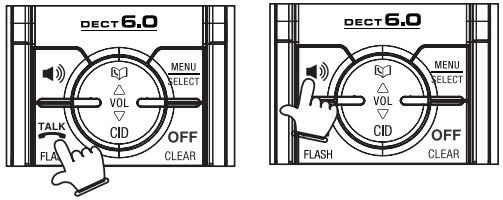

-OR-

To predial (view number before dialing):

- Dial the number (press **MUTE/REMOVE** to make corrections, or press and hold **REDIAL/PAUSE** to insert a dialing pause).
- Press **TALK/FLASH** or to use the speakerphone.

Receive a call

- Press **TALK/FLASH**, or any dialing keys (**0-9**, ***** or **#**) to answer an incoming call.

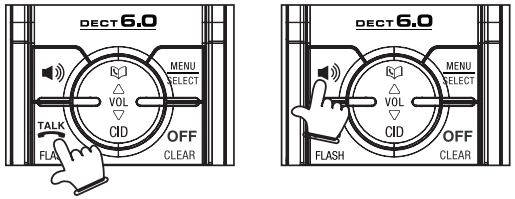

End a call

- Press **OFF/CLEAR** or put the handset back in the telephone base or charger.

STEP 4 Activate the answering system

The **ANS ON/OFF** must be on (the button light will be on) in order for the machine to answer calls and record messages. If the button light is off then calls will not be answered.

To turn on/off the answering system, press **ANS ON/OFF** to choose between on and off.

Use the volume control button on the telephone base to adjust the volume at anytime during the setup procedure.

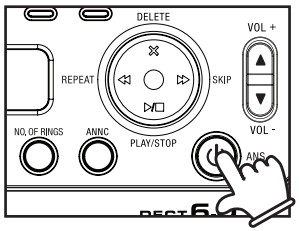

STEP 5 Outgoing announcement

An outgoing announcement is the message callers hear when calls are answered by the answering system. The telephone is preset with an announcement that answers calls with *"Hello, please leave a message after the tone."* You can use this default announcement, or replace it with your own.

To record your own announcement:

- Press **ANNC** while in idle mode, and the system says *"Announcement, press play or press announcement again to record a new announcement."*
- Press **ANNC** again and the system announces *"Record after the tone, press STOP when you are done."*
- After the tone, speak towards the microphone at the bottom front of the telephone base from about nine inches away.
- Press ▶/■**/PLAY/STOP** when finished.
- The answering system will automaticcally playback the newly recorded announcement and there will be a confirmation tone. Press ▶/■**/PLAY/STOP** to stop the playback at any time.
- If you do not like the announncement just recorded, press **ANNC** to record again before the confirmation tone.

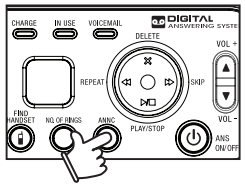

NOTE:
The telephone base settings (ringer melody, ringer volume, change remote access code, clear voicemail and reset to default settings) can be changed using the handset, please see the user's manual for complete instructions.

NOTE:
For complete feature instructions, please see the user's manual.

IMPORTANT!

If your product is not working properly:

- Refer to the **Troubleshooting** section of the user's manual.
- Visit our website at www.vtechphones.com; in Canada, www.vtechcanada.com
- Call our customer service at 1 (800) 595-9511; in Canada, 1 (800) 267-7377.

96-006406-020-100
issue 0